

7929 Lincoln Ave. Riverside, CA 92504
Phone: 951.689.ICON | Fax: 951.689.1016

| PART # | DESCRIPTION |
|--------|------------------------------|
| 22073 | 24 JL REAR SWAY BAR LINK KIT |

| COMPONENTS INCLUDED | |
|---|--|
| (2) 124088 SWAY BAR LINK 10.75" EYE TO EYE | |
| HARDWARE INCLUDED | |
| 22073H HARDWARE KIT | |
| (4) 139001 SLEEVE .625 X .508 X 1.625 (8) 297024 HAT BUSHING 1.005 X .620 X .755 | (2) 605838 M12-1.75 FLANGED NYLOCK NUT (2) 605854 M12-1.75 X 70MM CAP SCREW |
| TOOLS REQUIRED | |
| JACK JACK STANDS TORQUE WRENCH | 16MM SOCKET / WRENCH 18MM SOCKET / WRENCH |
| TECH NOTES | |
| 1. 22074 IS REQUIRED FOR 24 JEEP WRANGLER JL. | |




| WARNING! |
|--|
| ** READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! IF THESE INSTRUCTIONS ARE NOT PROPERLY FOLLOWED SEVERE FRAME, SUSPENSION AND TIRE DAMAGE MAY RESULT TO THE VEHICLE! |
| ** ICON VEHICLE DYNAMICS RECOMMENDS THAT YOU EXERCISE EXTREME CAUTION WHEN WORKING UNDER A VEHICLE THAT IS SUPPORTED WITH JACK STANDS. |
| ** ICON VEHICLE DYNAMICS RECOMMENDS ALL INSTALLATION TO BE PERFORMED BY A PROFESSIONAL SHOP/SERVICE TECHNICIAN. PRODUCT FAILURE CAUSED BY IMPROPER INSTALLATION WILL NOT BE COVERED UNDER ICON'S WARRANTY POLICY. |

INSTALLATION

- Using a properly rated jack, raise the rear of the vehicle and support the frame rails with jack stands. Ensure the jack stands are secure and set properly before lowering the jack. NEVER WORK UNDER AN UNSUPPORTED VEHICLE. Remove the rear wheels.
- Remove the sway bar links from the axle using (2) 18mm. Remove the sway bar links from the sway bar using a 6mm allen wrench and an 18mm. Set the links aside as they will be reused in the front. [FIGURE 1]

FIG.1

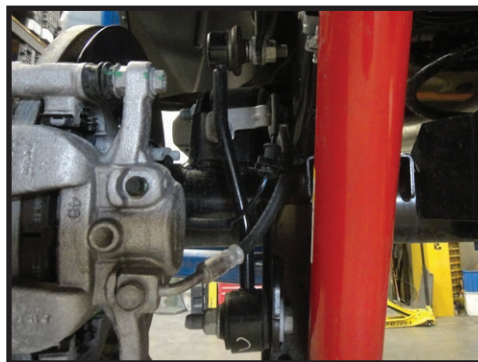

3. Grease the rear sway bar link bushings and sleeves then assemble the rear sway bar links. Mount the sway bar links using the supplied hardware with a 16mm and 18mm socket/wrench. Ensure that the head of the bolt is facing towards the wheel [Torque to 65 ft-lbs]. Use the factory lower bolt to mount the sway bar link to the axle. [Torque to factory spec] [FIGURE 2 & 3]

FIG.2



FIG.3



4. Install the wheels and lower the vehicle to the ground. [Torque lugs to factory spec]

VERIFY ALL FASTENERS ARE PROPERLY TORQUED BEFORE DRIVING VEHICLE.

RETORQUE ALL NUTS, BOLTS AND LUGS AFTER 100 MILES AND PERIODICALLY THEREAFTER.

ICON VEHICLE DYNAMICS LIMITED LIFETIME WARRANTY

ICON Vehicle Dynamics warrants to the original retail purchaser who owns the vehicle on which the product was originally installed. ICON Vehicle Dynamics does not warrant the product for finish, alterations, modifications and/or installation contrary to ICON Vehicle Dynamics instructions. ICON Vehicle Dynamics products are not designed, nor are they intended to be installed on vehicles used in race applications, for racing purposes or for similar activities. (A "race" is defined as any contest between two or more vehicles, or a contest of one or more vehicles against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America and Canada.

ICON Vehicle Dynamics' obligation under this warranty is limited to the repair or replacement, at ICON Vehicle Dynamics' discretion, of the defective product. Any and all costs of removal, installation or re-installation, freight charges and incidental or consequential damages are expressly excluded from this warranty. Items that are subject to wear are not considered defective when worn and are not covered.

ICON Vehicle Dynamics components must be installed as a complete kit as shown in our current application guide. Any substitutions or exemptions of required components will immediately void the warranty. Some finish damage may happen to parts during shipping and is not covered under warranty.

This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been improperly installed, modified or customized subject to accident, negligence, abuse or misuse.



ICON VEHICLE DYNAMICS®
PERFORMANCE SUSPENSION SYSTEMS AND SHOCK ABSORBERS

7929 Lincoln Ave. Riverside, CA 92504 Phone: 951.689.ICON Fax: 951.689.1016
www.iconvehicledynamics.com



FOLLOW US ON FACEBOOK!

