




7929 Lincoln Ave. Riverside, CA 92504
 Phone: 951.689.ICON Fax: 951.689.1016

PART #	DESCRIPTION
61100	2005-2007 FSD FRONT 7-9 BRAKE LINE KIT

COMPONENTS INCLUDED	
(1) 165020 2005-2007 FSD 7-9 FRONT BRAKE LINE SET	
HARDWARE INCLUDED	
(2) STAINLESS BRAIDED BRAKE LINES (2) BRAKE LINE BRACKETS	(2) RETAINER CLIPS (4) COPPER SEALS
TOOLS REQUIRED	
WISE GRIPS OR BRAKE LINE CLAMPS TORQUE WRENCH 11/16" SOCKET / WRENCH	11MM SOCKET / WRENCH 13MM SOCKET / WRENCH 14MM SOCKET / WRENCH
TECH NOTES	
N/A	

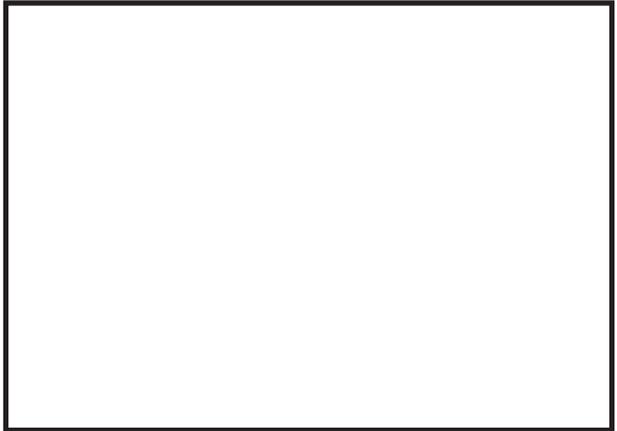

WARNING!

**** READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! IF THESE INSTRUCTIONS ARE NOT PROPERLY FOLLOWED SEVERE FRAME, SUSPENSION AND TIRE DAMAGE MAY RESULT TO THE VEHICLE!**

**** ICON VEHICLE DYNAMICS RECOMMENDS THAT YOU EXERCISE EXTREME CAUTION WHEN WORKING UNDER A VEHICLE THAT IS SUPPORTED WITH JACK STANDS.**

INSTALLATION

- 1.** Remove the driver side stock front brake line. Clamp off the rubber hose near the caliper. Disconnect the hose from the caliper using a 14mm.
- 2.** Place the new copper seals on both sides of the banjo (block) fitting on the new brake line and reuse the stock banjo bolt [Torque to factory spec].
- 3.** Disconnect the upper brake line fitting from the hardline using an 11mm. Disconnect the bracket from the frame with a 13mm.
- 4.** Connect the new brake line to the hard line using an 11/16 and an 11mm [Torque to factory spec]. Make sure to feed the bracket onto the brake line before connecting. Slide the retainer clip in from the side, securing the bracket to the brake line fitting. Reconnect the brake line bracket to the frame with a 13mm [Torque to factory spec].
- 5.** Repeat the previous steps on the passenger side.
- 6.** Bleed the brake system thoroughly.

VERIFY ALL FASTENERS ARE PROPERLY TORQUED BEFORE DRIVING VEHICLE.

RETORQUE ALL NUTS, BOLTS AND LUGS AFTER 100 MILES AND PERIODICALLY THEREAFTER.

ICON VEHICLE DYNAMICS LIMITED LIFETIME WARRANTY

Icon Vehicle Dynamics warrants to the original retail purchaser who owns the vehicle on which the product was originally installed. Icon Vehicle Dynamics does not warrant the product for finish, alterations, modifications and/or installation contrary to Icon Vehicle Dynamics instructions. Icon Vehicle Dynamics products are not designed, nor are they intended to be installed on vehicles used in race applications, for racing purposes or for similar activities. (A "race" is defined as any contest between two or more vehicles, or a contest of one or more vehicles against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America and Canada.

Icon Vehicle Dynamics' obligation under this warranty is limited to the repair or replacement, at Icon Vehicle Dynamics' discretion, of the defective product. Any and all costs of removal, installation or re-installation, freight charges and incidental or consequential damages are expressly excluded from this warranty. Items that are subject to wear are not considered defective when worn and are not covered.

Icon Vehicle Dynamics components must be installed as a complete kit as shown in our current application guide. Any substitutions or exemptions of required components will immediately void the warranty. Some finish damage may happen to parts during shipping and is not covered under warranty.

This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been improperly installed, modified or customized subject to accident, negligence, abuse or misuse.

ICON VEHICLE DYNAMICS

PERFORMANCE SUSPENSION SYSTEMS AND SHOCK ABSORBERS

7929 Lincoln Ave. Riverside, CA 92504 Phone: 951.689.ICON Fax: 951.689.1016
www.iconvehicledynamics.com



FOLLOW US ON FACEBOOK!

