

7929 Lincoln Ave. Riverside, CA 92504
Phone: 951.689.ICON Fax: 951.689.1016

PART #	DESCRIPTION
95000	10-14 RAPTOR FRONT 3.0 VS COILOVER RR CDCV SHOCKS

COMPONENTS INCLUDED

(1) 194961D 10-14 RAPTOR FRONT 3.0 CO (DRVR)	(2) 95000H 10-14 RAPTOR CO HARDWARE KIT
(1) 194961P 10-14 RAPTOR FRONT 3.0 CO (PASS)	

HARDWARE INCLUDED

95000H HARDWARE KIT

(1) 197011 RAPTOR LCA ADAPTER	(1) 605500 5/8-11 X 5.00 BOLT
(1) 197013 RAPTOR LCA ADAPTER (NARROW)	(1) 605520 5/8-11 NYLOCK NUT
(3) 605101 3/8-16 X 1.00 BOLT	(2) 605530 5/8" FLAT WASHER
(3) 605131 3/8 SPLIT LOCK WASHER	(2) 605931 STAINLESS STEEL HOSE CLAMPS

TOOLS REQUIRED

JACK JACK STANDS GRINDER W/ BARREL SANDER TORQUE WRENCH HAMMER	5/16" NUT DRIVER 9/16" SOCKET / WRENCH 15/16" SOCKET / WRENCH 15MM SOCKET / WRENCH 21MM SOCKET / WRENCH 30MM SOCKET / WRENCH
--	---

TECH NOTES

1. YOUR ICON COILOVER ASSEMBLIES COME FACTORY CHARGED TO 150 PSI. RELEASING NITROGEN PRESSURE MAY LEAD TO SHOCK MALFUNCTION AND REDUCED RIDE QUALITY. FAILURE CAUSED BY LOW NITROGEN PRESSURE IS NOT COVERED UNDER ICON'S WARRANTY POLICY.

2. YOUR ICON COILOVER ASSEMBLIES COME SHIPPED AT ICON'S RECOMMENDED RIDE HEIGHT. REDUCING DROOP TRAVEL WILL REDUCE RIDE QUALITY. DO NOT PRELOAD THE COIL BEYOND 1.375" OF EXPOSED THREADS BETWEEN THE BOTTOM OF THE TOP CAP AND THE TOP OF THE COIL ADJUSTER NUT. ADJUSTING PRELOAD BEYOND THIS SETTING WILL CAUSE THE COIL TO BIND AND DAMAGE WILL OCCUR TO COILOVER AND/OR VEHICLE.



WARNING!

**** READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! IF THESE INSTRUCTIONS ARE NOT PROPERLY FOLLOWED SEVERE FRAME, SUSPENSION AND TIRE DAMAGE MAY RESULT TO THE VEHICLE!**

**** ICON VEHICLE DYNAMICS RECOMMENDS THAT YOU EXERCISE EXTREME CAUTION WHEN WORKING UNDER A VEHICLE THAT IS SUPPORTED WITH JACK STANDS.**

**** ICON VEHICLE DYNAMICS RECOMMENDS ALL INSTALLATION TO BE PERFORMED BY A PROFESSIONAL SHOP/SERVICE TECHNICIAN. PRODUCT FAILURE CAUSED BY IMPROPER INSTALLATION WILL NOT BE COVERED UNDER ICON'S WARRANTY POLICY.**


INSTALLATION

1. Ensure truck is in gear or in park, set parking brake, turn off engine, and chock tires.
2. With the vehicle sitting on level ground, measure from the center of the wheel hub to the top of the fender opening. Record this measurement, you will refer to it later to set the ride height.
3. Using a properly rated jack, raise the front of the vehicle and support the frame rails with jack stands. Ensure the jack stands are secure and set properly before lowering the jack. NEVER WORK UNDER AN UNSUPPORTED VEHICLE. Remove the front wheels.
4. Disconnect the outer tie rod end on both sides: Loosen the nut a few turns, strike the end of the steering knuckle with a large hammer to dislodge the taper. Remove the nut and swing the tie rod out of the way. Take care to not damage the threads on the tie rod end. **[FIGURE 1 & 2]**

FIG.1



FIG.2

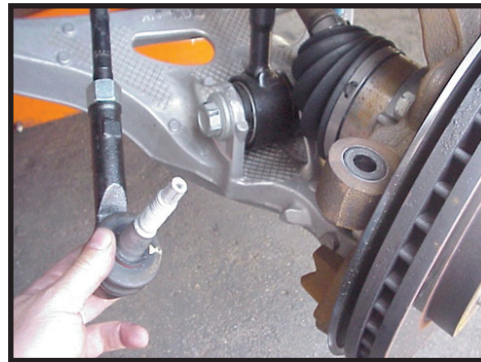

5. Remove the (3) nuts securing the upper coil seat to the frame perch. Do not loosen or remove the larger center nut securing the spring seat to the shock shaft. This will result in the stock coil assembly coming apart violently, causing damage to components and possible injury.
6. Remove the bolt holding the lower shock eyelet to the lower control arm.

7. Remove the stock coilover assembly. Due to rubber bushing stiffness you may need to pull down on the suspension. To make this easier, remove the upper control arm by loosening the UCA nut from the spindle and breaking the taper loose, freeing the upper control arm from the knuckle. Be careful not to damage any brake lines or wires that may be routed down the arm. [FIGURE 3 & 4]

FIG.3


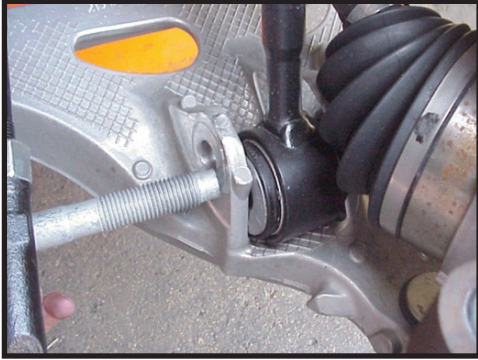


FIG.4

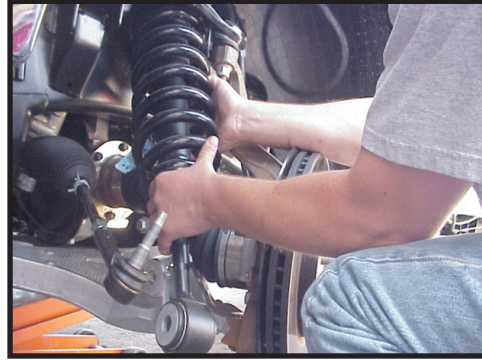

8. Before installing the new ICON coilover, the stock coil bucket will need to be trimmed to allow for clearance of the large hose attaching the remote reservoir and compression adjuster. Use the examples to lightly trim the edge to allow the fittings to pass through the bucket. [FIGURE 5 & 6]

FIG.5


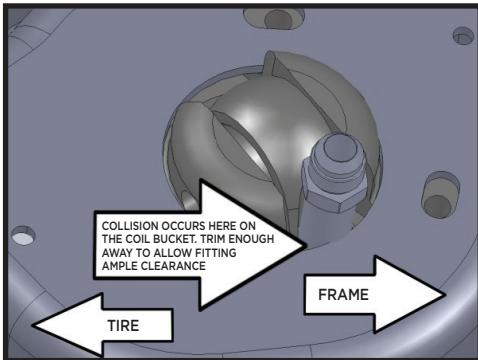


FIG.6

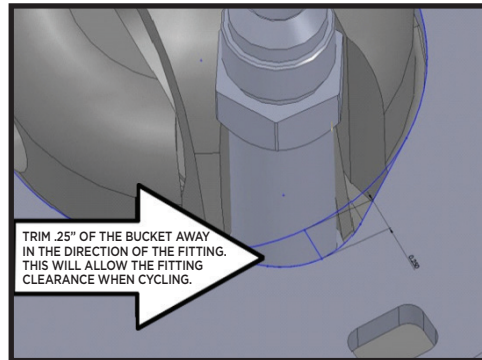

9. Once the shock bucket has been trimmed, install the coilover assembly by guiding the remote reservoir through the hole in the bucket and route the reservoir towards the front of the chassis.


10. Install the upper mount using (3) 3/8" x 1.00" bolts and (3) lock washers. Do not reuse old coilover hat.

11. Install lower shock mount to the lower control arm: First, install the adapter slugs into the lower mount from the inside out. The spacers are designed to space the shock as far forward as possible (away from the axle). Cut the zip tie off of the lower shock eye and make sure that the spacers do not fall out. Slide the lower end of the shock between the adapter slugs and install the supplied lower 5/8" bolt with washers. [Torque to 120 ft-lbs] [FIGURE 7 & 8]

FIG.7



FIG.8

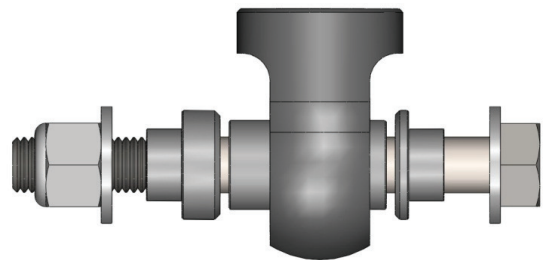

12. Reinstall the outer tie rod end. [Torque to 54 ft-lbs] Install cotter pin.

13. Route the reservoir hose in a safe manner putting the reservoir at the front of the coil bucket. Using the upper control arm bolt, slide the reservoir mounting bracket onto the chassis. The reservoir bracket is mounted underneath the nut of the front upper control arm bolt. Remove the nut from the control arm bolt, slide the bracket over the bolt and up against the coil bucket. The passenger side also requires that you remove the ground strap and reinstall it through the reservoir bracket. [Torque control arm nut to factory spec] Use hose clamps to attach the reservoir to the bracket. Do not overtighten hose clamps. [FIGURE 9 & 10]

FIG.9

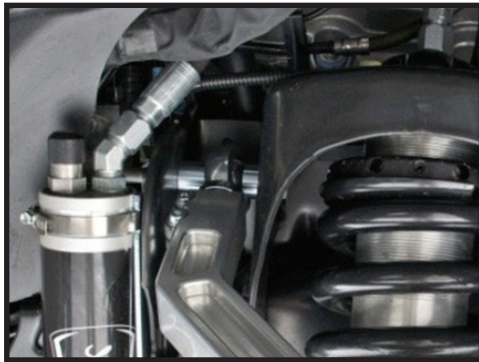


FIG.10



14. Reinstall the wheels and lower the vehicle back to the ground. Roll the vehicle back and forth a couple of feet and bounce the front end to allow the suspension to settle to its new ride height. Remeasure from the wheel hub center to top of fender opening, compare to measurements in step 2 to see the actual lift height gained. Adjust coilover preload as necessary then have the vehicle professionally aligned.

VERIFY ALL FASTENERS ARE PROPERLY TORQUED BEFORE DRIVING VEHICLE.

RETORQUE ALL NUTS, BOLTS AND LUGS AFTER 100 MILES AND PERIODICALLY THEREAFTER.

3.0 VS SERIES SHOCK & COILOVER TECHNICAL INFORMATION

MAINTENANCE

ICON shock absorbers are a high quality rebuildable race style shock absorber designed for optimal performance. With a unit of this caliber on your vehicle, routine maintenance is required to keep them looking and operating in like new condition. Residual oil and assembly lube may be present at all seal paths from the factory out of the box and is considered normal. Pooling of oil however is not acceptable at any time and one should contact the ICON dealer where purchased.

BELOW ARE GUIDELINES BASED ON HOW YOU USE YOUR VEHICLE BUT YOUR MILEAGE MAY VARY:

STREET USE:

- Send in for factory servicing every 40,000 miles or if a leak develops, ride quality decreases, or they begin to make excessive noise.
- Remove any buildup of road salt, mud, or debris from shocks and coil springs anytime accrued
- Clean with mild soap and water with each oil change or anytime you notice build up.
- Wax the cylinders yearly with automotive wax to prevent corrosion.
- Check nitrogen pressure yearly. (252004 charge needle assembly available at any ICON distributor)
- Check bearings for excessive wear yearly.
- **DO NOT** apply any type of lube to the upper and lower bearings.

STREET/DIRT:

- Send in for factory servicing every 15,000 miles or if a leak develops, ride quality decreases, or they begin to make excessive noise.
- Clean with mild soap and water with each oil change, offroad trip, or anytime you notice build up.
- Wax the cylinders yearly with automotive wax to prevent corrosion.
- Check nitrogen pressure each dirt outing. (252004 charge needle assembly available at any ICON distributor)
- Check bearings for excessive wear yearly.
- **DO NOT** apply any type of lube to the upper and lower bearings.

DIRT USE:

- Send in for factory servicing every 1,000 miles.
- Check nitrogen pressure each outing. (252004 charge needle assembly available at any ICON distributor)
- Remove any buildup of mud or debris from shocks and coil springs after every outing.

SELF-SERVICE:

- Contact ICON for service kits & tools at (951) 689-4266.

PRODUCT REGISTRATION

Please visit: <http://www.iconvehicledynamics.com/tech-support/registration/> to register your product.

ICON VEHICLE DYNAMICS SHOCK ABSORBER WARRANTY

This shock absorber has a 1 year warranty against any manufacturer's defects. If a shock fails within the initial year of ownership, the shock must be shipped to ICON Vehicle Dynamics for inspection and service. If a shock is inspected and it has been determined the shock failed due to neglect, damage caused by improper installation or any other reason besides "normal wear and tear", the owner of said shock is responsible for all service costs. This includes labor, parts, and shipping.

ICON Vehicle Dynamics warrants to the original retail purchaser who owns the vehicle on which the product was originally installed. ICON Vehicle Dynamics does not warrant the product for finish, alterations, modifications and/or installation contrary to ICON Vehicle Dynamics instructions. ICON Vehicle Dynamics products are not designed, nor are they intended to be installed on vehicles used in race applications, for racing purposes or for similar activities. (A "race" is defined as any contest between two or more vehicles, or a contest of one or more vehicles against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America and Canada.

ICON Vehicle Dynamics' obligation under this warranty is limited to the repair or replacement, at ICON Vehicle Dynamics' discretion, of the defective product. Any and all costs of removal, installation or re-installation, freight charges and incidental or consequential damages are expressly excluded from this warranty. Items that are subject to wear are not considered defective when worn and are not covered.

ICON Vehicle Dynamics components must be installed as a complete kit as shown in our current application guide. Any substitutions or exemptions of required components will immediately void the warranty. Some finish damage may happen to parts during shipping and is not covered under warranty.

This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been improperly installed, modified or customized subject to accident, negligence, abuse or misuse.

To send a shock in for warranty please visit our website <http://www.iconvehicledynamics.com/tech-support/shock-service/>



ICON VEHICLE DYNAMICS®
PERFORMANCE SUSPENSION SYSTEMS AND SHOCK ABSORBERS

7929 Lincoln Ave. Riverside, CA 92504 Phone: 951.689.ICON Fax: 951.689.1016
www.iconvehicledynamics.com



FOLLOW US ON FACEBOOK!

